

INSTALLATION INSTRUCTIONS

FALCON

Track Luminaire

WTK-71S | WHK-71S | WTK-72S | WHK-72S | WTK-73S | WHK-73S

WAC GROUP

052026V1

This product must be installed in accordance with all applicable national and local electrical and construction codes by a person familiar with the construction and operation of the product and the hazards involved. Failure to comply with the following installation instructions may result in death or serious injury.

⚠ CAUTION

Fully disconnect power before installation is started to prevent injury due to electrical shock.

Inspect all parts for visible damage before installation. Cease installation if damage is found.

Do not exceed the safety-rated voltage of the unit.

Do not strip an excessive amount of sheathing from any wiring.

Any modifications of any kind will fully void the product's warranty.

Ce produit doit être installé conformément à toutes les réglementations électriques et de construction nationales et locales en vigueur, par une personne familiarisée avec la construction et le fonctionnement du produit, ainsi qu'avec les dangers qu'il présente. Le non-respect des instructions d'installation suivantes peut entraîner des blessures graves, voire mortelles.

⚠ PRUDENCE

Débranchez complètement l'alimentation avant de commencer l'installation afin d'éviter tout risque de choc électrique.

Inspectez toutes les pièces avant l'installation pour détecter tout dommage visible. Arrêtez


l'installation en cas de dommage.

Ne dépassez pas la tension nominale de sécurité de l'appareil.

Ne dénudez pas excessivement les câbles.

Toute modification, quelle qu'elle soit, annulera la garantie du produit.

Warning: Do not touch the bevel surface under any circumstances. This will leave a residue that will affect the light output.

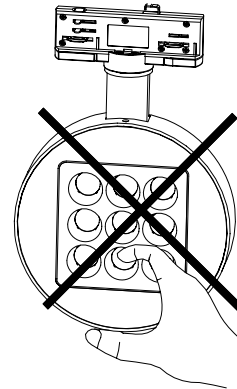

Installation Specifications:

LED Track Luminaire	Track System
WTK-71S, WTK-72S, WTK-73S	WTK 120V W Track
WHK-71S, WHK-72S, WHK-73S	WHK 277V W Track

Specifications	
Input:	120V (WTK), 277V (WHK)
Installation:	W Track mounted

INSTALLATION INSTRUCTIONS

FALCON

Track Luminaire


WTK-71S | WHK-71S | WTK-72S | WHK-72S | WTK-73S | WHK-73S

WAC GROUP


052026V1

Fixture Dimensions:


**WTK-71S
WHK-71S**

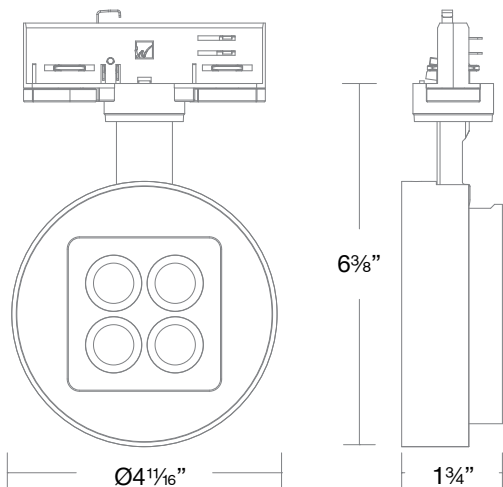


**WTK-71S-A
WHK-71S-A
(Wall Wash)**

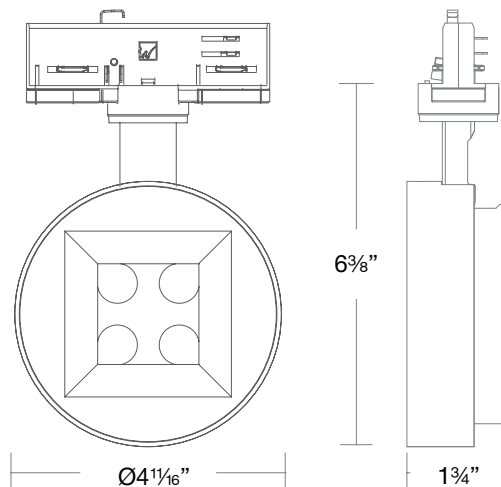


**WTK-72S
WHK-72S**

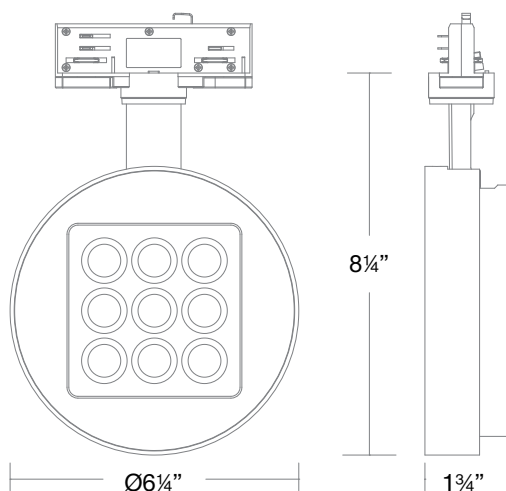


**WTK-72S-A
WHK-72S-A
(Wall Wash)**

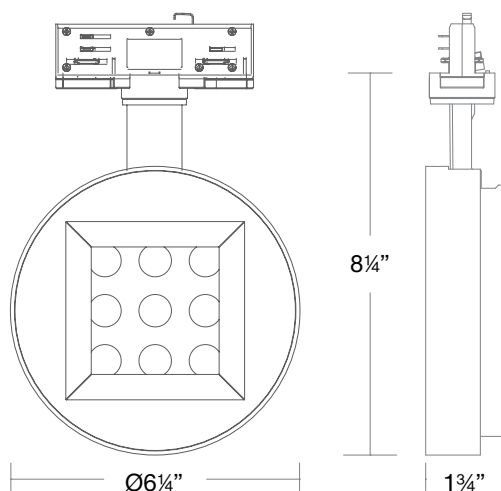

**WTK-73S
WHK-73S**

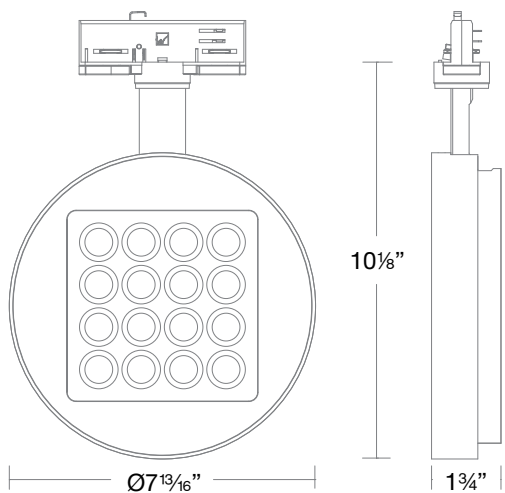

**WTK-73S-A
WHK-73S-A
(Wall Wash)**

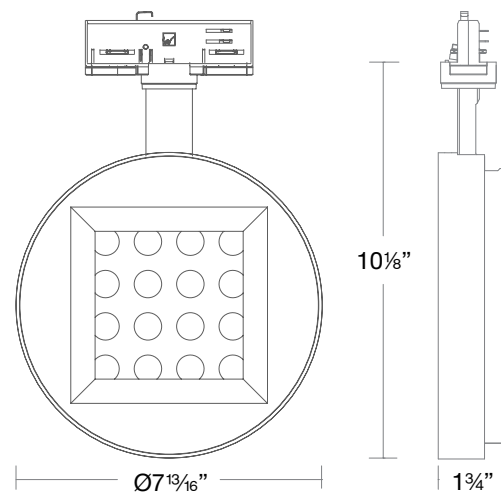

INSTALLATION INSTRUCTIONS

FALCON

Track Luminaire

WTK-71S | WHK-71S | WTK-72S | WHK-72S | WTK-73S | WHK-73S

WAC GROUP

052026V1

Track Installation:

1. Shut off the power at the circuit breaker before taking any further steps.
2. Ensure that the lock switch on the fixture is in the unlock position and that the circuit selection handle is in the off position. (Figure 1)
3. Align the alignment tab on the fixture adapter with the groove on the track, then insert the adapter into the track. (Figure 2)
4. Turn the lock switch on the fixture back to the locked position to secure the fixture to the track. (Figure 2)
5. Use the circuit selection handle to set the luminaire to either circuit 1 or circuit 2 depending on the desired circuit. (Figure 3)
6. Switch the main fuse breaker and circuit breaker to the "ON" position before turning the wall switch to "ON".

Figure 1

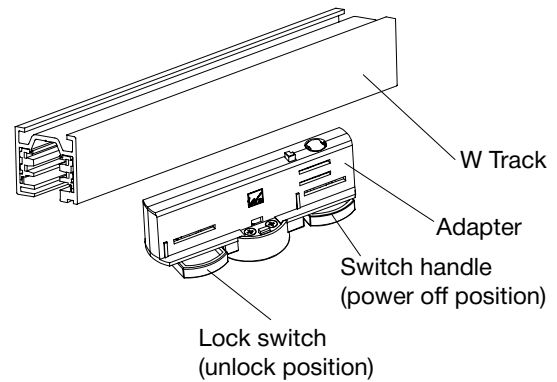


Figure 2


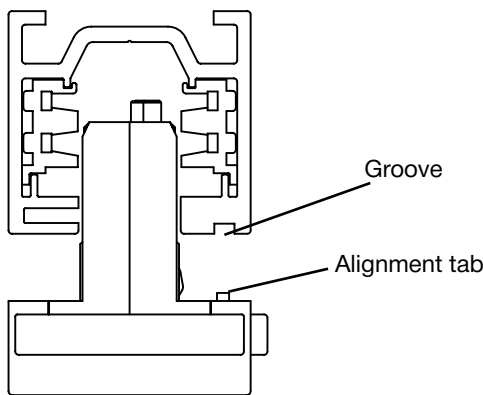



Figure 3

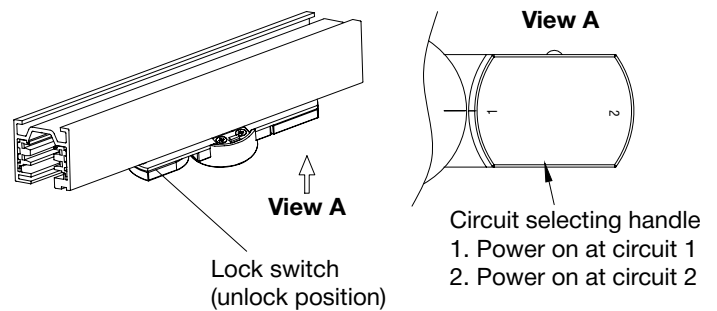

Installation Orientation:

The track system can only be installed horizontally on a ceiling. (Figure 4)

Figure 4

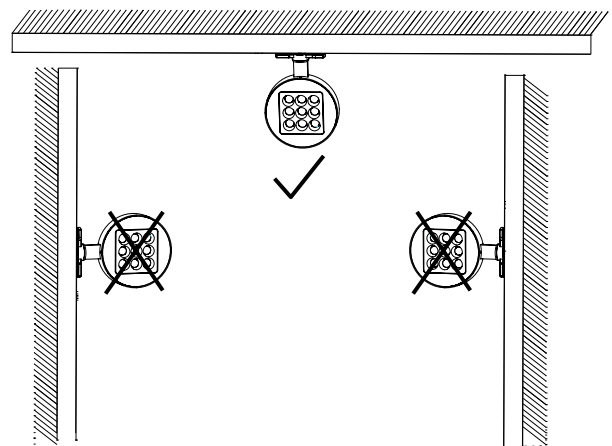

INSTALLATION INSTRUCTIONS

FALCON

Track Luminaire

WTK-71S | WHK-71S | WTK-72S | WHK-72S | WTK-73S | WHK-73S

WAC GROUP

052026V1

Fixture Aiming:

With the fixture powered, rotate the luminaire's body horizontally and vertically to aim it properly. There are index markings on the fixture to aid in precise vertical aiming. The fixture is capable of 90° vertical aiming and 360° horizontal rotation, regardless of fixture size. (Figure 5)

Accessory Installation:

(Not applicable to Wall Wash fixtures)

1. Vertically rotate the fixture body downwards until the top surface is visible. Locate the "⏏" symbol which is next to a small opening. Carefully align a small flathead screwdriver or allen key with this opening and lightly press inwards. This will release the front cover, which can now be manually pulled from the fixture body. (Figure 5)
2. With the fixture body now open, accessories of various purposes, such as alternate beam angles, lenses, or filters, can now be installed in their proper ordering within the fixture body. (Figure 6 & 7)
3. Ensure that all surfaces are clean and reassemble the fixture body using the reverse of the steps for disassembly.

Fixture Cleaning and Maintenance:

If the light output shows residue or any other evidence of contamination, remove the front cover and gently clean the film and lens module with a microfiber cloth. Upon reassembly, then gently wipe the beveled surface on the exterior of the front cover with a microfiber cloth, ensuring not to make contact with the surface other than with the cloth. (Figure 7 & 8, depending on version)

Figure 5


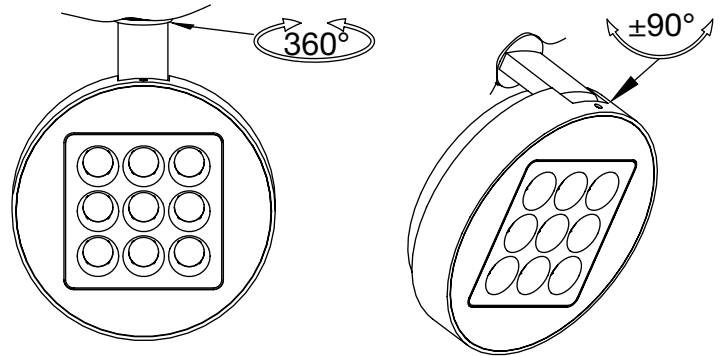


Figure 6

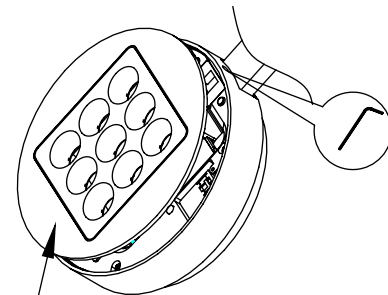

The cover has a magnetic seal at the bottom of the front cover.

Figure 7

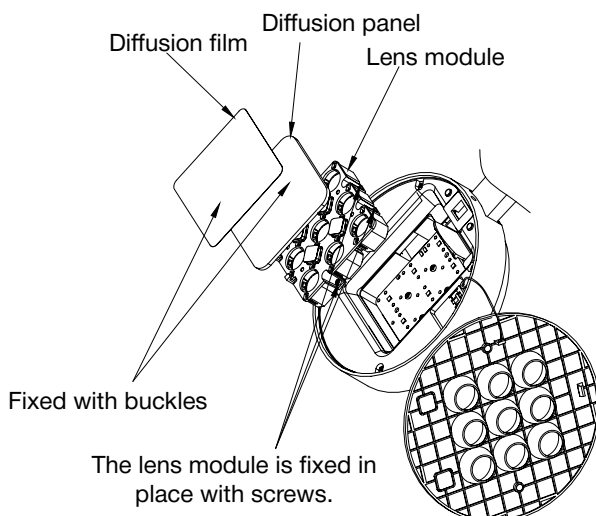


Figure 8 (Wall Wash)

