

Installation Declaration:

1. Please read the manual carefully before installation;
2. Please have a professional electrician perform the installation;
3. To avoid the risk of electric shock, please ensure the power is turned off before installation and maintenance;
4. The fixture can be recessed into the ceiling surface, and sufficient installation space must be reserved. Do not cover the fixture with insulation materials or flammable substances to avoid fire hazards;
5. If the glass is cracked, please replace it immediately;
6. Do not install the fixture on an unstable or weak skylight to prevent it from falling;
7. Keep the manual for future reference;
8. The light source within this fixture should be replaced by the manufacturer, its service agent, or a person with similar qualifications.

Wiring for fixture installation:

① 1. Before installing the lamp, please follow the installation instructions to process the sample for trial installation, and adjust the electric batch to the appropriate torque to prevent excessive torque from damaging the lamp support feet.
2. After the lamp is installed, ensure that there is enough space to ensure the normal operation of the lamp.

② Ceiling opening size: 75x75mm

③ Each road width 10mm. Incoming cable. Lamp leads (L, N) and terminal blocks Diagram.

④ Before installation, pull off the plastic bag to remove the reflector. Alternatively, turn the brackets counterclockwise, then use a screwdriver to gently pry out the reflector from the slot.

⑤ Upon completing driver wiring, insert both the driver and luminaire assembly firmly against the ceiling. Caution: Manually support the unit during final installation to avoid accidental dislodgement.

⑥ Installation with electric batches (Clockwise for installation, counterclockwise for disassembly)

⑦ When installing the reflector, align the ribbed strip with holes on the reflector with the corresponding ribbed strip on the frame, then snap it into place to complete the fixture installation.

⑧ ADDT35 lamps Angle adjustment (ADLT35 lamps do not require this step) :
ADDT35 angle adjustment: Use a screwdriver in the adjustment slot to pivot the fixture, then lock in place with a 3mm hex wrench.

⑨ When installing the reflector, align the ribbed strip with holes on the reflector with the corresponding ribbed strip on the frame, then snap it into place to complete the fixture installation.


* If the lighting fixture has built-in leads, and these connection leads need to be connected to an independent terminal block (refer to Figure 5 for connection diagram), each terminal block size should not be less than 10x20x25mm.

* For fixtures without electrical components, if the fixture has brown and blue leads, it cannot be directly connected to 220V AC. The customer must provide the electrical components, which need to be compatible with the light source

Installation Declaration:

1. Please read the manual carefully before installation;
2. Please have a professional electrician perform the installation;
3. To avoid the risk of electric shock, please ensure the power is turned off before installation and maintenance;
4. The fixture can be recessed into the ceiling surface, and sufficient installation space must be reserved. Do not cover the fixture with insulation materials or flammable substances to avoid fire hazards;
5. If the glass is cracked, please replace it immediately;
6. Do not install the fixture on an unstable or weak skylight to prevent it from falling;
7. Keep the manual for future reference;
8. The light source within this fixture should be replaced by the manufacturer, its service agent, or a person with similar qualifications.

Wiring for fixture installation:

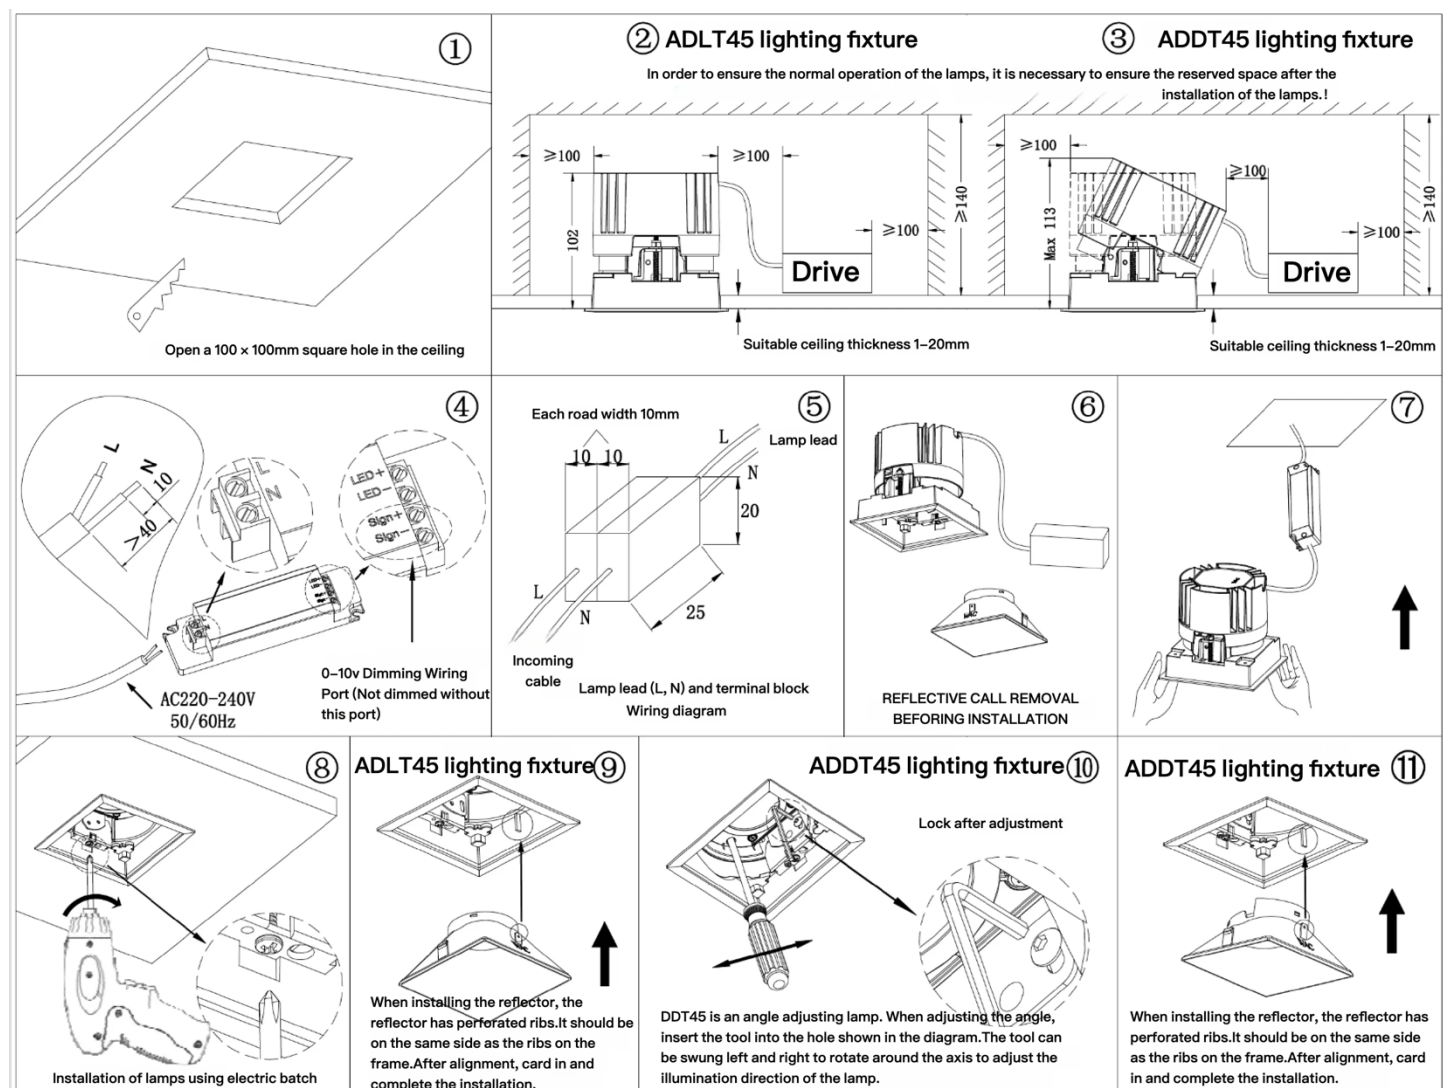

* If the lighting fixture has built-in leads, and these connection leads need to be connected to an independent terminal block (refer to Figure 5 for connection diagram), each terminal block size should not be less than 10x20x25mm.

* For fixtures without electrical components, if the fixture has brown and blue leads, it cannot be directly connected to 220V AC. The customer must provide the electrical components, which need to be compatible with the light source