

INSTALLATION INSTRUCTIONS

MERE

Track Luminaire

WTK-35S | WHK-35S | WTK-36S | WHK-36S | WTK-37S | WHK-37S | WTK-38S | WHK-38S

WAC GROUP

052026V1

This product must be installed in accordance with all applicable national and local electrical and construction codes by a person familiar with the construction and operation of the product and the hazards involved. Failure to comply with the following installation instructions may result in death or serious injury.

⚠ CAUTION

Fully disconnect power before installation is started to prevent injury due to electrical shock.

Inspect all parts for visible damage before installation. Cease installation if damage is found.

Do not exceed the safety-rated voltage of the unit.

Do not strip an excessive amount of sheathing from any wiring.

Any modifications of any kind will fully void the product's warranty.

Ce produit doit être installé conformément à toutes les réglementations électriques et de construction nationales et locales en vigueur, par une personne familiarisée avec la construction et le fonctionnement du produit, ainsi qu'avec les dangers qu'il présente. Le non-respect des instructions d'installation suivantes peut entraîner des blessures graves, voire mortelles.

⚠ PRUDENCE

Débranchez complètement l'alimentation avant de commencer l'installation afin d'éviter tout risque de choc électrique.

Inspectez toutes les pièces avant l'installation pour détecter tout dommage visible. Arrêtez


l'installation en cas de dommage.

Ne dépassez pas la tension nominale de sécurité de l'appareil.

Ne dénudez pas excessivement les câbles.

Toute modification, quelle qu'elle soit, annulera la garantie du produit.

Warning: Do not touch the glass cover under any circumstances. This will leave a residue that will affect the light output.

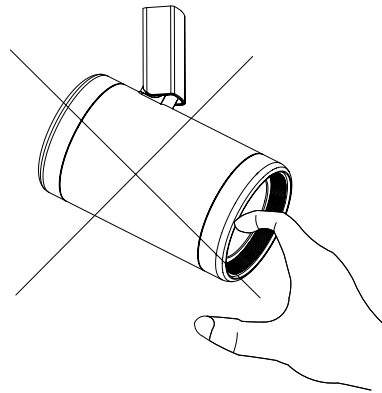

Installation Specifications:

LED Track Luminaire	Track System
WTK-35S, WTK-36S, WTK-37S, WTK-38S	WTK 120V W Track
WHK-35S, WHK-36S, WHK-37S, WHK-38S	WHK 277V W Track

Specifications	
Input:	120V (WTK), 277V (WHK)
Installation:	W Track mounted

INSTALLATION INSTRUCTIONS

MERE

Track Luminaire


WTK-35S | WHK-35S | WTK-36S | WHK-36S | WTK-37S | WHK-37S | WTK-38S | WHK-38S

WAC GROUP


052026V1

Fixture Dimensions:


**WTK-35S
WHK-35S**

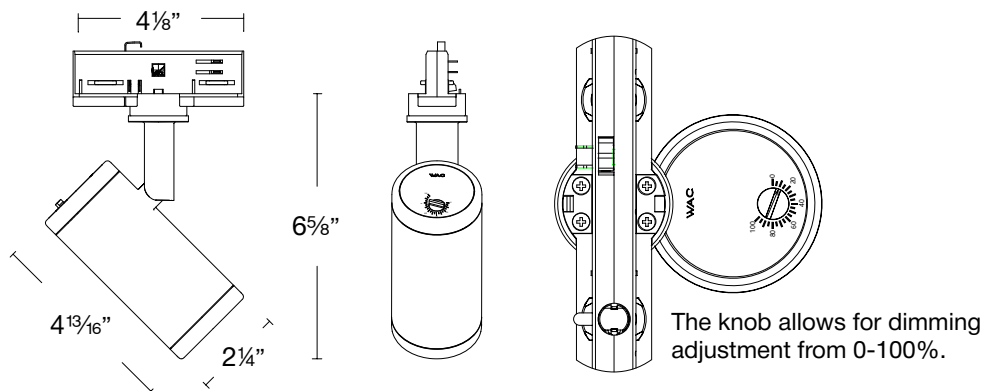


**WTK-36S
WHK-36S**

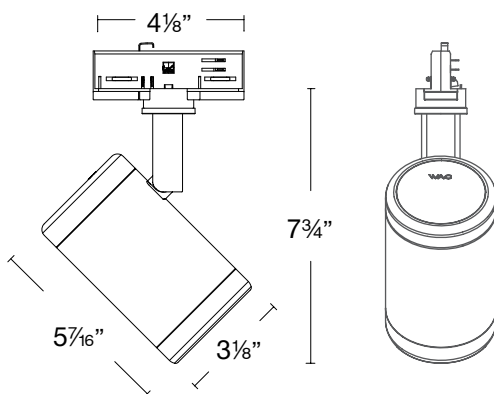

**WTK-37S
WHK-37S**

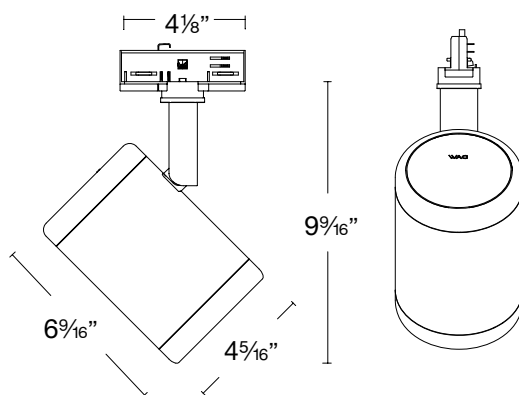

**WTK-38S
WHK-38S**

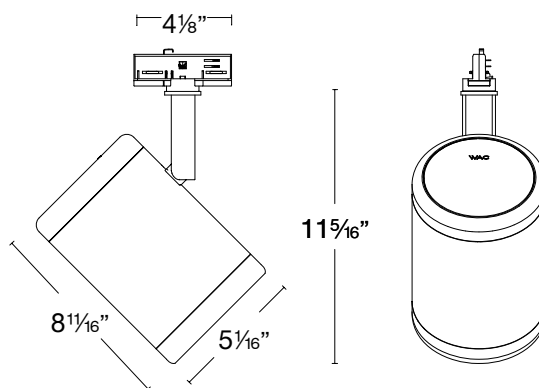

INSTALLATION INSTRUCTIONS

NERE

Track Luminaire

WTK-35S | WHK-35S | WTK-36S | WHK-36S | WTK-37S | WHK-37S | WTK-38S | WHK-38S

WAC GROUP

052026V1

Track Installation:

1. Shut off the power at the circuit breaker before taking any further steps.
2. Ensure that the lock switch on the fixture is in the unlock position and that the circuit selection handle is in the off position. (Figure 1)
3. Align the alignment tab on the fixture adapter with the groove on the track, then insert the adapter into the track. (Figure 2)
4. Turn the lock switch on the fixture back to the locked position to secure the fixture to the track. (Figure 2)
5. Use the circuit selection handle to set the luminaire to either circuit 1 or circuit 2 depending on the desired circuit. (Figure 3)
6. (NERE 38S ONLY) If installing the 38S sized Nere fixture, align the safety chain adapter with the track opening. Then insert the adapter into the track and rotate it 90° clockwise to tighten it within the track. The adapter should be perpendicular to the track. (Figure 4)
7. Switch the main fuse breaker and circuit breaker to the "ON" position before turning the wall switch to "ON".

Figure 1

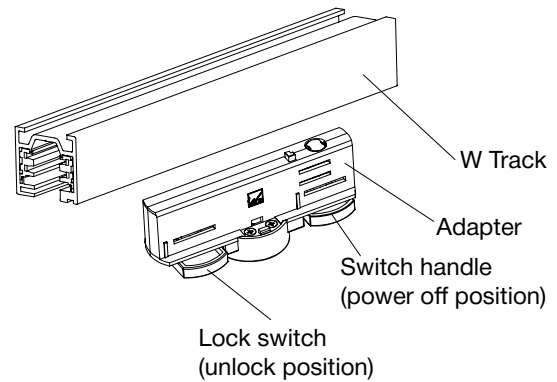


Figure 2

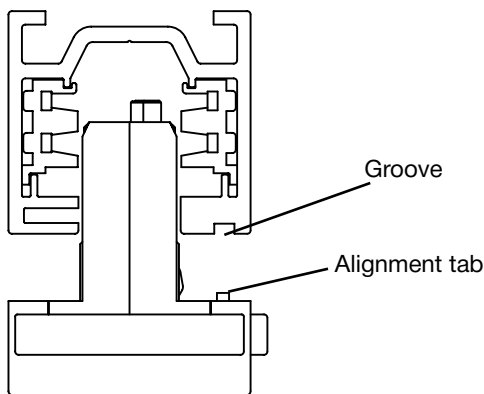


Figure 3


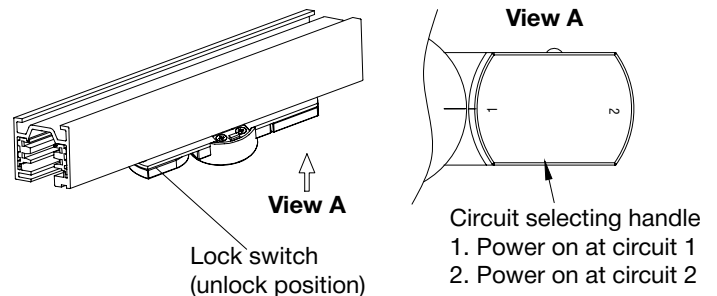


Figure 4

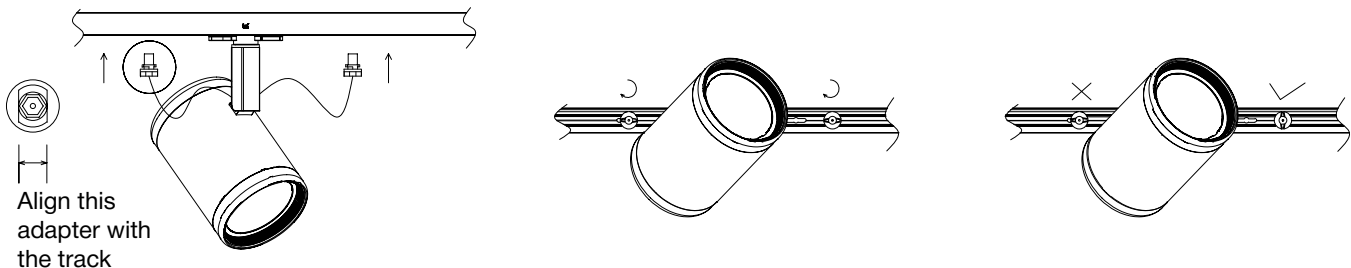

INSTALLATION INSTRUCTIONS

MERE

Track Luminaire

WTK-35S | WHK-35S | WTK-36S | WHK-36S | WTK-37S | WHK-37S | WTK-38S | WHK-38S


WAC GROUP

052026V1

Fixture Aiming:

With the fixture powered, rotate the luminaire's body horizontally and vertically to aim it properly. The fixture is capable of 90° vertical aiming and 360° horizontal rotation, regardless of fixture size. (Figure 5)


Figure 5

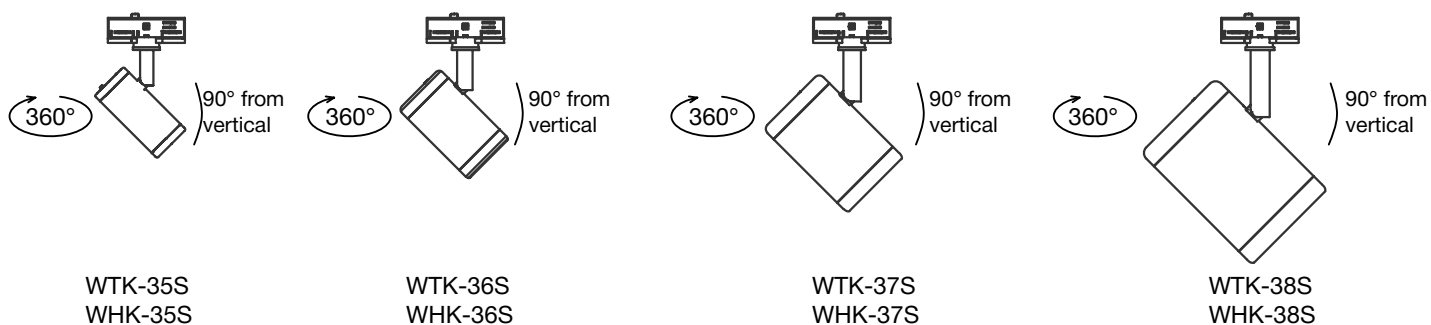

Installation Orientation:

The track system can only be installed horizontally on a ceiling. (Figure 6)

Figure 6

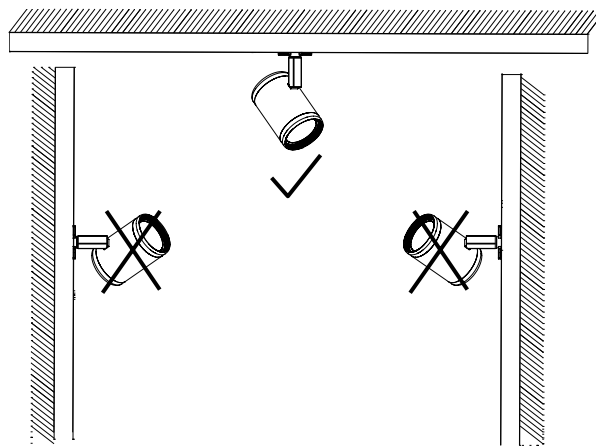

INSTALLATION INSTRUCTIONS

MERE

Track Luminaire

WTK-35S | WHK-35S | WTK-36S | WHK-36S | WTK-37S | WHK-37S | WTK-38S | WHK-38S

WAC GROUP

052026V1

Lens Accessory Installation:

1. Lightly pull the front cap away from the fixture to access the lens. The front cap is internally tethered to the fixture to prevent it from falling during disassembly. (Figure 7)
2. Twist the lens counterclockwise to remove it from the fixture. (Figure 8)
3. To reinstall the original or replacement lens, align the outward protrusions on the lens with the notches on the LED holder. Once aligned, press the lens inward and turn it clockwise to secure it tightly. (Figure 9)
4. When reinstalling the front cap assembly, carefully align the ribs and notches found on the front cap and the internal surface of the fixture body. Once the front cap and fixture body are fully aligned, press the front cap inward to complete the reassembly. (Figure 10)

Figure 7


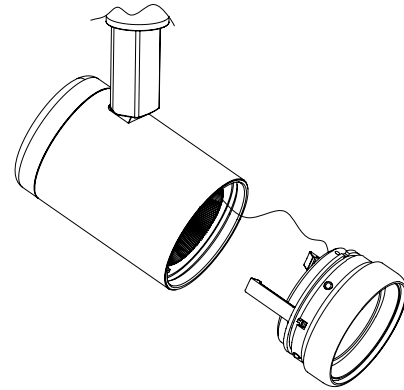


Figure 8

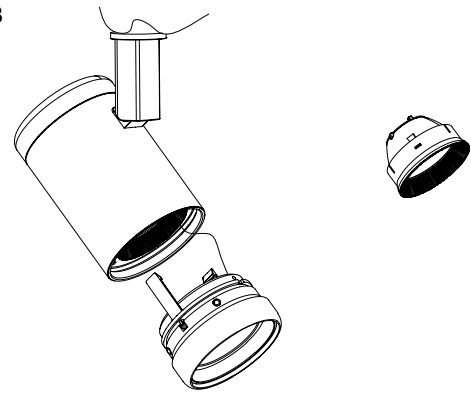

Front Frame Accessory Installation:

1. To install an accessory within the front cap, such as a filter, diffuser, or louver, twist the front cap retaining ring counterclockwise until it is loose enough to remove. (Figure 11)
2. Install the desired accessory within the front cap assembly and then reinstall the front cap retaining ring to complete reassembly. (Figure 12 & 13)

Figure 9

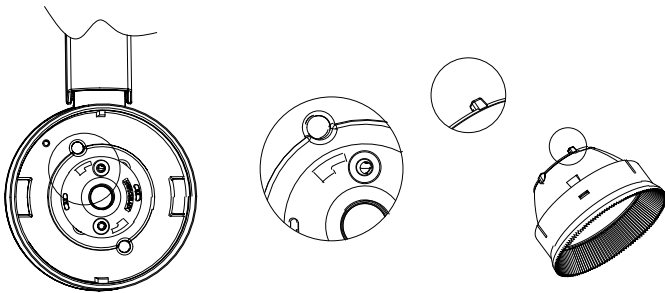


Figure 10

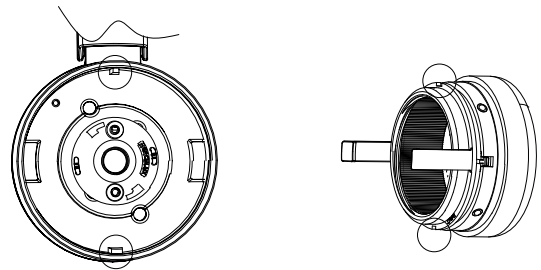


Figure 11

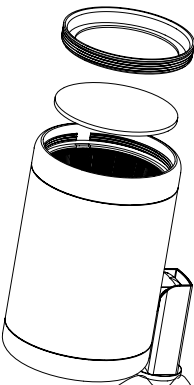


Figure 12

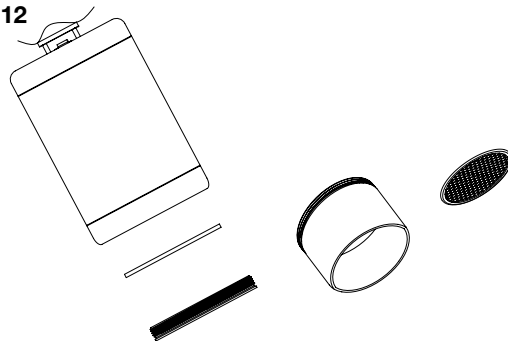


Figure 13

